

PageWorks 18L

Quick Guide for Installation and Reference



MINOLTA


Contents

<i>Step 1</i>	Unpacking the Printer 1
<i>Reference 1</i>	Printer Parts 3
<i>Reference 2</i>	Control Panel 4
<i>Step 2</i>	Attaching the Face-Down Tray and Tray 1 11
<i>Step 3</i>	Loading Paper 13
<i>Step 4</i>	Connecting the Power Cord 14
<i>Step 5</i>	Turning the Power On/Off 14
<i>Step 6</i>	Connecting the Printer to the Computer (Local Connection) 15
<i>Step 7</i>	Installing the Printer Driver 16
<i>Reference 3</i>	Troubleshooting 18

Unpacking the Printer

Step 1

Before operating your printer, read the Set-Up Instructions carefully from cover to cover. Use this guide for reference.

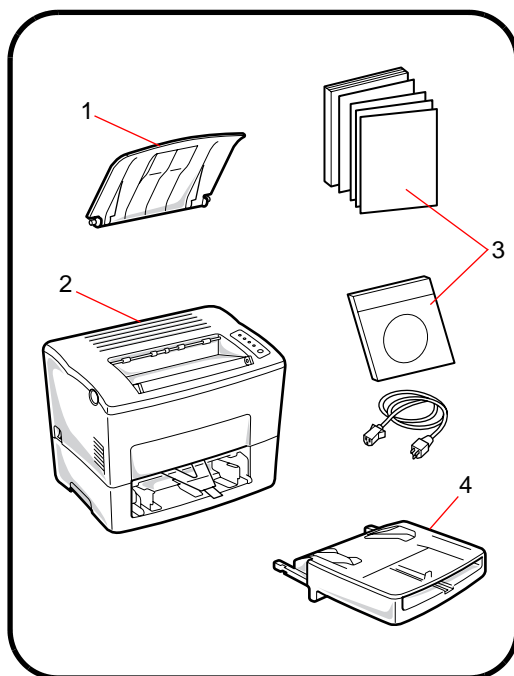

1. Face-down tray

2. Printer

3. Accessories

User's Manual

Quick Guide

Warranty card

Registration card

CD-ROM


Power cord

4. Tray 1


- 1.** Take the items and accessories shown above out of the carton.
- 2.** Remove the plastic bag and peel off the shipping tape from the printer.




Step 1

- 3.** Pull out the plastic-lead strip from the paper feed inlet.

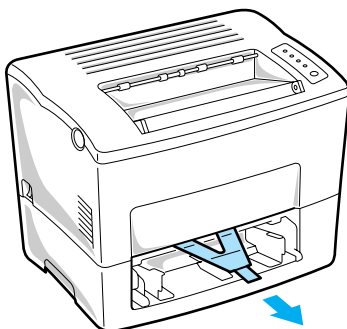

- 4.** Remove the tape strip from the back of the printer.

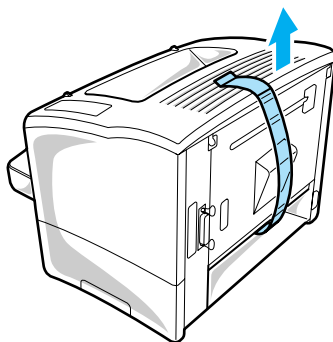


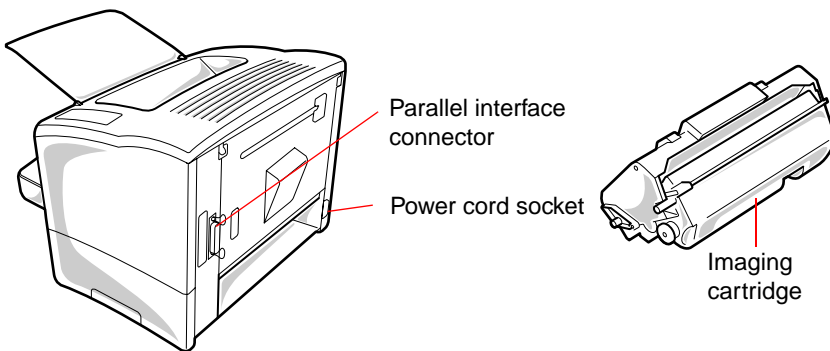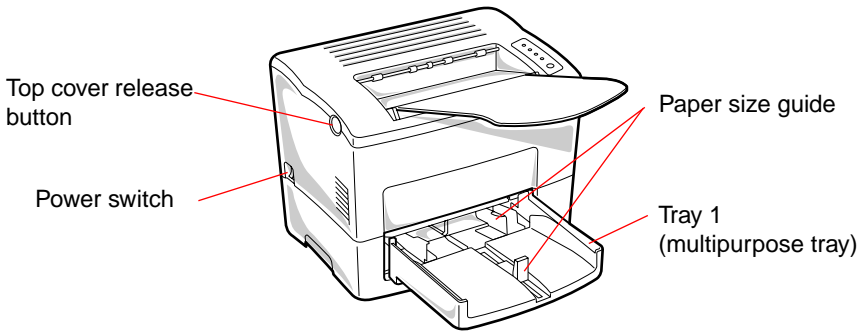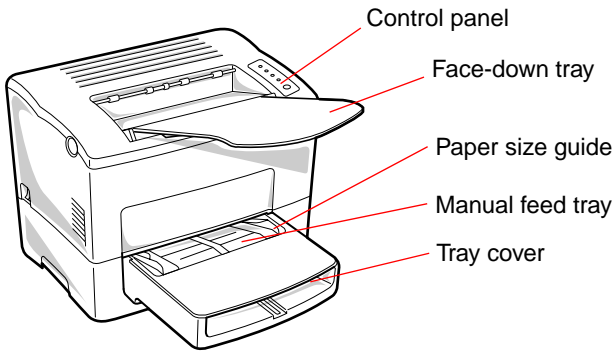

Control Panel

Reference 2

 The control panel has four indicator lights and one button.

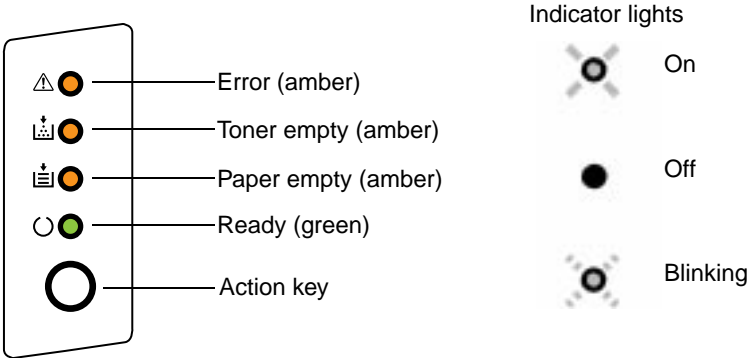



























































































































	On or blinking Ready LED	See the explanation for Ready on the LED chart. ➡ p. 5
	On or blinking Error LED	See the explanation for Error on the LED chart. ➡ p. 7



































Note






 



 



 



 



 



 












 










 










- The LED display will change as you press the Action key.
- The appearance of this icon throughout this manual indicates when you need to press the Action key.

  When the Ready LED is on	
Ready	Power Save
 ● Printer is ready and able to print.  ● See page 6-16 of the User's Manual.  ●  	 ● Printer has entered the Power Save Mode.  ● See page 6-17 of the User's Manual.  ●   Slowly blinking
Initializing	Warming Up
  Power on, initializing.   See page 6-16 of the User's Manual.    	 ● Printer is warming up.  ● See page 6-16 of the User's Manual.  ●  
Tray 1 Paper Empty	Tray 2 Paper Empty
   The paper supply of Tray 1 is empty.  ●  ● See page 2-10, 3-4 or 6-18 of the User's Manual.   →    	  ● The paper supply of Tray 2 is empty.  ●   See page 3-7 or 6-18 of the User's Manual.   →    
Tray 3 Paper Empty	Toner Low
   The paper supply of Tray 3 is empty.  ●   See page 3-7 or 6-18 of the User's Manual.   →    	  The imaging cartridge is low on toner but printing is still possible.   See page 5-1 or 6-17 of the User's Manual.  ●  

<div><div></div><div></div><div>When the Ready LED is on</div></div>	
Wait Action	Size Mismatch
<div><div></div><div></div><div>Press the Action key in the event of a paper size error or when operating in the manual mode.</div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div>See page 6-17 of the User's Manual.</div></div>	<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div>The wrong size of paper has been detected in Tray 1, Tray 2 or Tray 3. See page 3-1, 4-50 or 6-18 of the User's Manual.</div></div>
Tray 2 No Cassette/No Tray 2	Tray 3 No Cassette/No Tray 3
<div><div></div><div></div><div></div><div></div><div>The cassette for Tray 2 is not in place or a print job was sent using the Tray 2 setting in the printer driver, even though Tray 2 is not installed on the printer. See page 2-22, 4-51 or 6-19 of the User's Manual.</div></div> <div><div></div><div></div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div><div></div></div>	<div><div></div><div></div><div></div><div></div><div>The cassette for Tray 3 is not in place or a print job was sent using the Tray 3 setting in the printer driver, even though Tray 3 is not installed on the printer. See page 2-22, 4-51 or 6-19 of the User's Manual.</div></div> <div><div></div><div></div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div><div></div></div>
Duplex Unit Not Available	
<div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div></div></div> <div><div></div><div></div><div>A duplex print job has been sent to a printer that is not equipped with a duplex unit. See page 4-56, 4-59 or 6-19 of the User's Manual.</div></div>	

  When the Error LED is on	
Buffer Overflow	Cover Open
    The buffer cannot handle the volume of data being sent. See page 6-20 of the User's Manual.	    The cover is open. See page 1-3 or 6-20 of the User's Manual.
Paper Size Error	Cover Open (Duplex Unit)
    The paper-size setting of the printer driver does not match the size of paper that has been detected in the tray. See page 3-1, 4-50 or 6-20 of the User's Manual.	    The cover of the duplex unit is open. See page 2-19, 6-9 or 6-23 of the User's Manual.
Wrong Media (Duplex Unit)	Wrong Size (Duplex Unit)
    The wrong media has been loaded into the duplex unit. See page 3-16 or 6-23 of the User's Manual.	    The wrong size of paper has been loaded into the duplex unit. See page 3-16 or 6-23 of the User's Manual.
Video Under Run	Replace Imaging Cartridge
    The buffer cannot handle the volume of data being sent. See page 6-24 of the User's Manual.	    The imaging cartridge is out of toner. See page 5-1 or 6-24 of the User's Manual.









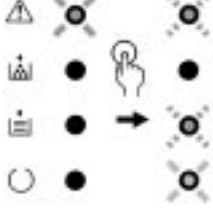
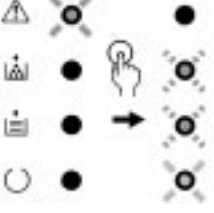
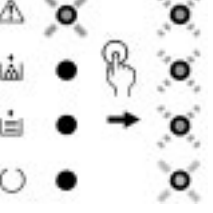
  When the Error LED is on	
Paper Misfeed 1	Paper Misfeed 2
    <p>A paper misfeed occurred near the multipurpose tray. See page 6-7 or 6-21 of the User's Manual.</p>	    <p>A paper misfeed occurred near Tray 2. See page 6-8 or 6-21 of the User's Manual.</p>
Paper Misfeed 3	Paper Misfeed 4
    <p>A paper misfeed occurred near Tray 3. See page 6-8 or 6-21 of the User's Manual.</p>	    <p>A paper misfeed occurred near the manual feeding tray. See page 6-7 or 6-21 of the User's Manual.</p>
Paper Misfeed 5	Paper Misfeed 6
    <p>A paper misfeed occurred near the lower-duplex unit. See page 6-9 or 6-22 of the User's Manual.</p>	    <p>A paper misfeed occurred near the imaging cartridge. See page 6-2 or 6-22 of the User's Manual.</p>
Paper Misfeed 7	Paper Misfeed 8
    <p>A paper misfeed occurred near the fuser. See page 6-2 or 6-22 of the User's Manual.</p>	    <p>A paper misfeed occurred near the upper-duplex unit. See page 6-9 or 6-22 of the User's Manual.</p>

<div><div></div><div>When the Error LED is on</div></div>	
I/O Error (Parallel)	I/O Error (Network)
<div><div></div><div>A controller error occurred at the parallel port. See page 6-24 of the User's Manual.</div></div>	<div><div></div><div>A network port error occurred. See page 6-24 of the User's Manual.</div></div>

Fatal Error

Requires servicing.


Turn the power to the printer off and then on again. If the same LED message continues to be displayed, contact your local Minolta Technical Support.

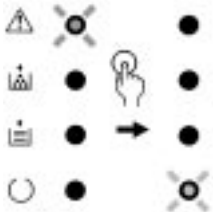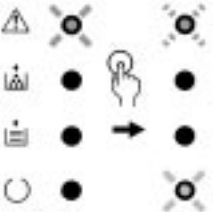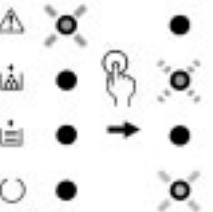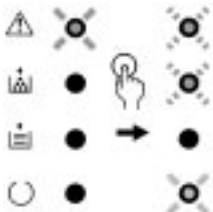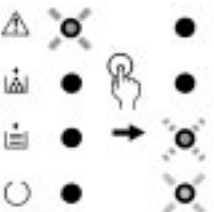  When the Error LED is on		
HSYNC Abnormal	Polygonal Mirror Motor	Main Motor
		
Fuser Low Temperature	Fuser Overheat	SRAM, DRAM, ROM, Engine I/F, CPU
		
Fuser Warm Up	Fuser Fan	P/H Fan
		

Attaching the Face-Down Tray and Tray 1


Step 2

1. With both hands, gently bend the face-down tray inwards and insert one of its tabs into its holder on the upper portion of the printer. Continue to bend the face-down tray so that it curves enough for the second tab to fit into its holder and release the tray into position.

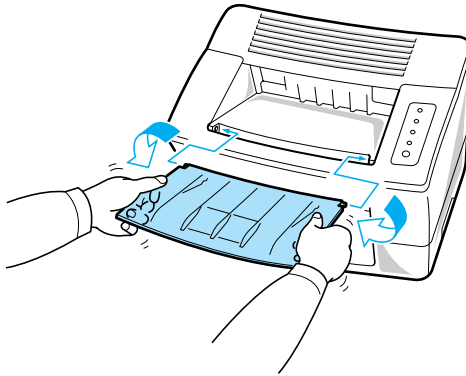


Note

- Be sure to close the face-down tray before opening the top cover to prevent injuries.

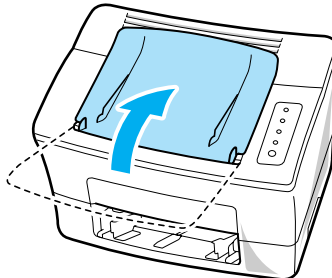


Step 2

2. Using the left and right slots in the printer as guides, gently push Tray 1 until it cannot be inserted any further (as shown in the illustration).

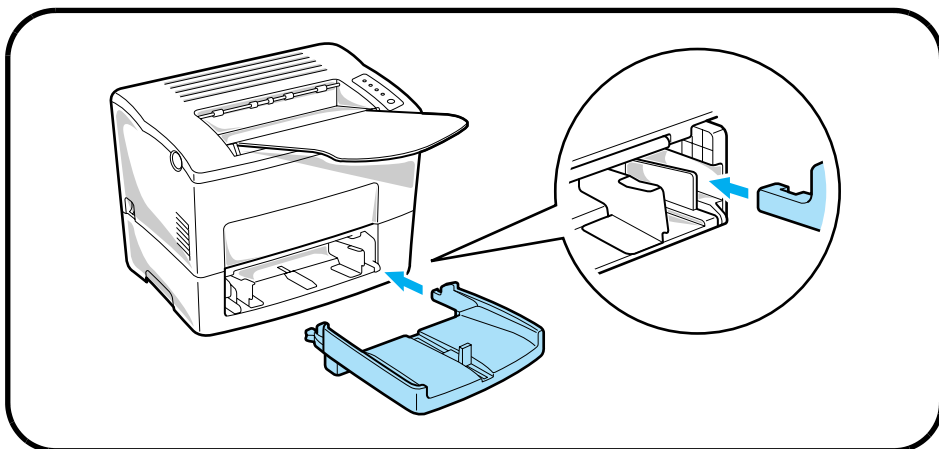


3. Attach the tray cover onto Tray 1.

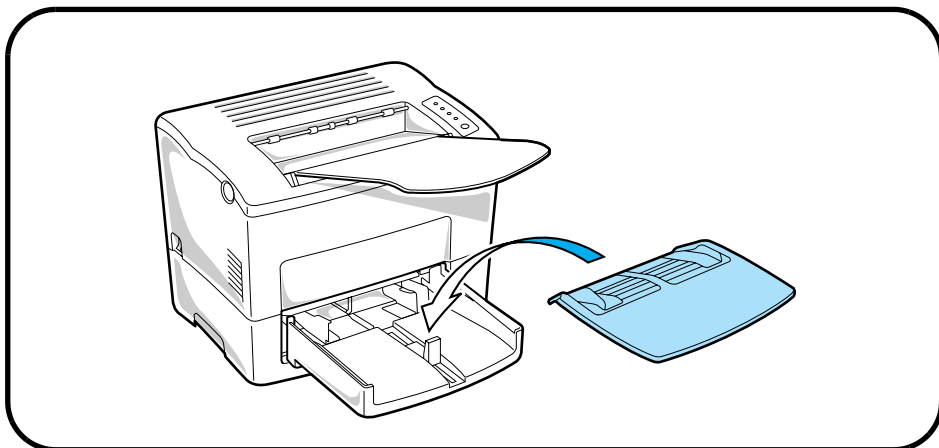


Loading Paper

Step 3


1. Remove the tray cover from Tray 1.

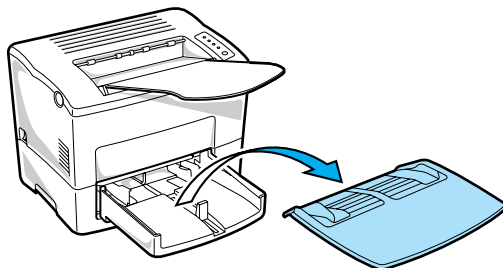


2. Open all three of the paper size guides.

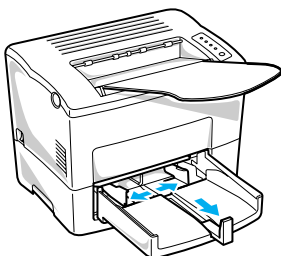

3. Place the paper stack onto the tray, print-side up. Secure the stack by adjusting the paper size guides.

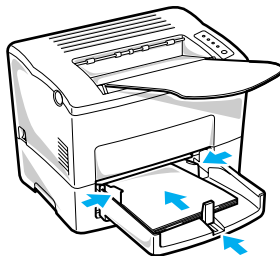



4. Replace the tray cover onto Tray 1.

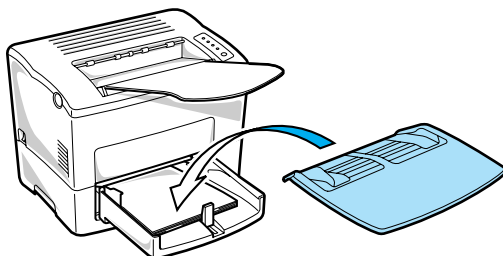

Connecting the Power Cord


Step 4

1. Make sure that the printer's power switch is in the **O** (Off) position.
2. Connect one end of the power cord that comes with the printer to the power cord socket. Plug the other end into a power outlet.

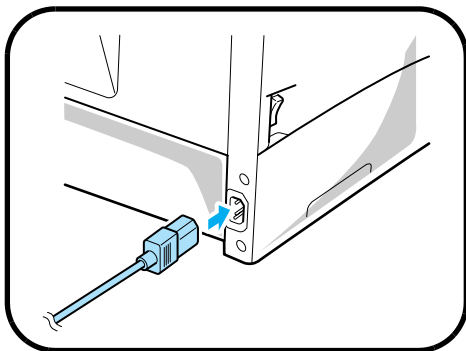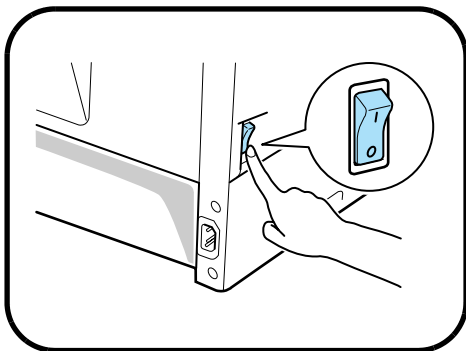

Turning the Power On/Off

Step 5

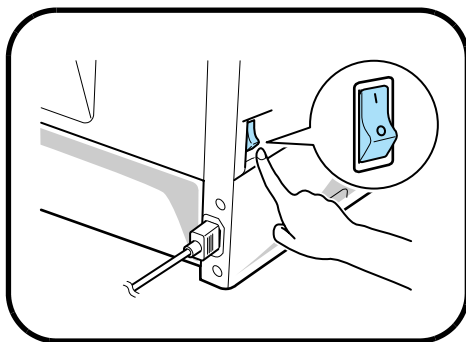

Turning the power ON

After connecting the printer to a power outlet, press the power switch to the **I** (On) position. Turning on the printer causes all the indicators on the control panel to light, which indicates that the printer is warming up. In about 23 seconds only the READY indicator remains lit, indicating that the printer is ready to print.

Turning the power OFF

Press the power switch to the **O** (Off) position to turn the printer off.

Note


DO NOT turn the power OFF while:

- printing
- the printer is receiving the data from the computer (Ready indicator on the control panel is blinking)

Connecting the Printer to the Computer (Local Connection)

Step 6

1. Make sure that the printer and the computer you are connecting it to are both turned off.
2. Connect one end of the interface cable to the parallel port of the computer.
3. Connect the other end of the cable to the parallel connector on the back of the printer. Secure the cable using the two clips on the parallel connector.

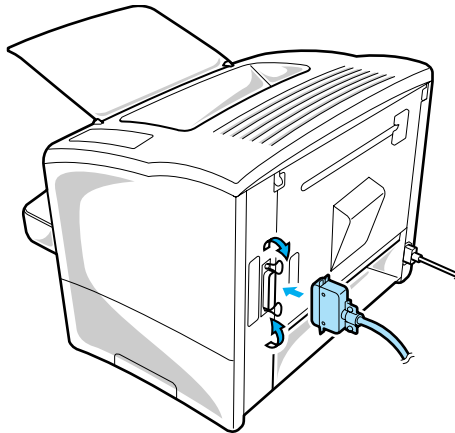

Installing the Printer Driver

Step 7

Install the printer driver to control the printer from your computer. You can install the printer driver for Windows 95, Windows 98 or Windows NT 4.0 from the Printer Driver CD-ROM. Follow the instructions below and for more details, see the User's Manual that came with your printer.

Windows 95/98

The printer driver must be installed using the CD-ROM's installer.

Installing from the CD-ROM (Auto Run)

1. Turn on your computer and start up Windows 95 or Windows 98.
2. Insert the **Printer Driver** CD-ROM into your computer's CD-ROM drive.
3. The opening screen is automatically displayed. Click on the **GDI Printer Driver** menu to start the installer.

Note

- The configuration of some computers may prevent the opening screen from appearing automatically. If the screen does not appear, double-click **setup.exe** in the CD-ROM.
- The printer driver must be installed using the CD-ROM's installer. Do not use the Add Printer wizard from the Printers folder. Installation through the Add Printer wizard will prevent the printer from performing properly.

After installing the printer driver, the **Minolta PageWorks/Pro 18L** printer icon appears in the **Printers** folder.

Windows NT 4.0

Installing from the CD-ROM (Auto Run)

1. Turn on your computer and start up Windows NT 4.0.
2. Insert the **Printer Driver** CD-ROM into your computer's CD-ROM drive.
3. The opening screen is automatically displayed. Click on the **GDI Printer Driver** menu to start the installer.

Note

- The configuration of some computers may prevent the opening screen from appearing automatically. If the screen does not appear, double-click **setup.exe** in the CD-ROM.
- The printer driver must be installed using the CD-ROM's installer. Do not use the Add Printer wizard from the Printers folder.


After installing the printer driver, the **Minolta PageWorks/Pro 18L** printer icon appears in the **Printers** folder.

For details, refer to *Chapter 4* of the *User's Manual*.


Clearing a Paper Misfeed

Remove the misfed sheet of paper by pulling it in the direction indicated by the arrow.


Face-down tray

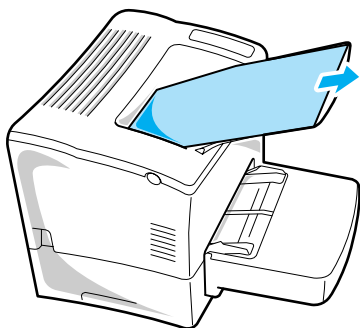

Tray 1

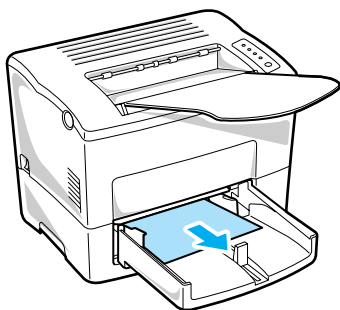


Manual feed tray

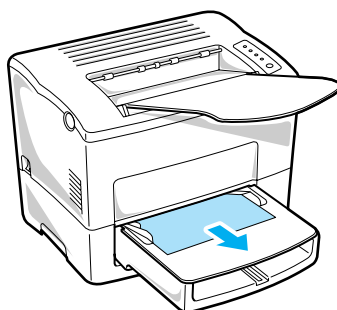

Clearing a Paper Misfeed

Inside the printer

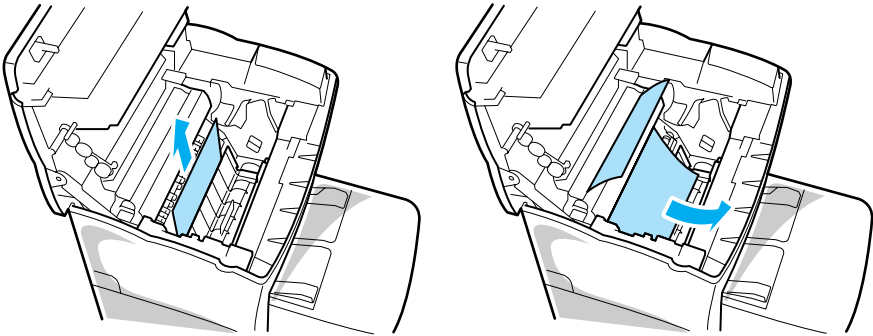

Caution

- The fusing unit inside the printer can become very hot during operation. Do not touch the area to avoid injury.
- Do not touch the image transfer roller.

Solving Print Quality Problems

- Remove the imaging cartridge and gently shake it a few times to distribute remaining toner.
- Remove the imaging cartridge and check it for damage. Replace the imaging cartridge with a new one if necessary.
- Clean the inside of the printer. (Refer to the User's Manual.)

For more details, refer to the "Troubleshooting" and "Maintenance" sections of the User's Manual.

No output

- Make sure that the printer is plugged in.
- Make sure that power is turned on.
- Make sure that you are using the correct type of printer cable.
- Make sure that your computer's communication port settings are correct.

For more details, refer to the User's Manual.

MEMO

MEMO

MEMO



Copyright
1999 MINOLTA CO., LTD
Printed in Japan

The information contained in this manual is
subject to change without notice to
incorporate improvements made on the
product or products the manual covers.